




Dell XPS 720 H2C Sound Card Replacement

Removing and installing a sound card on the Dell XPS 720 H2C.

Written By: Graham Bultema

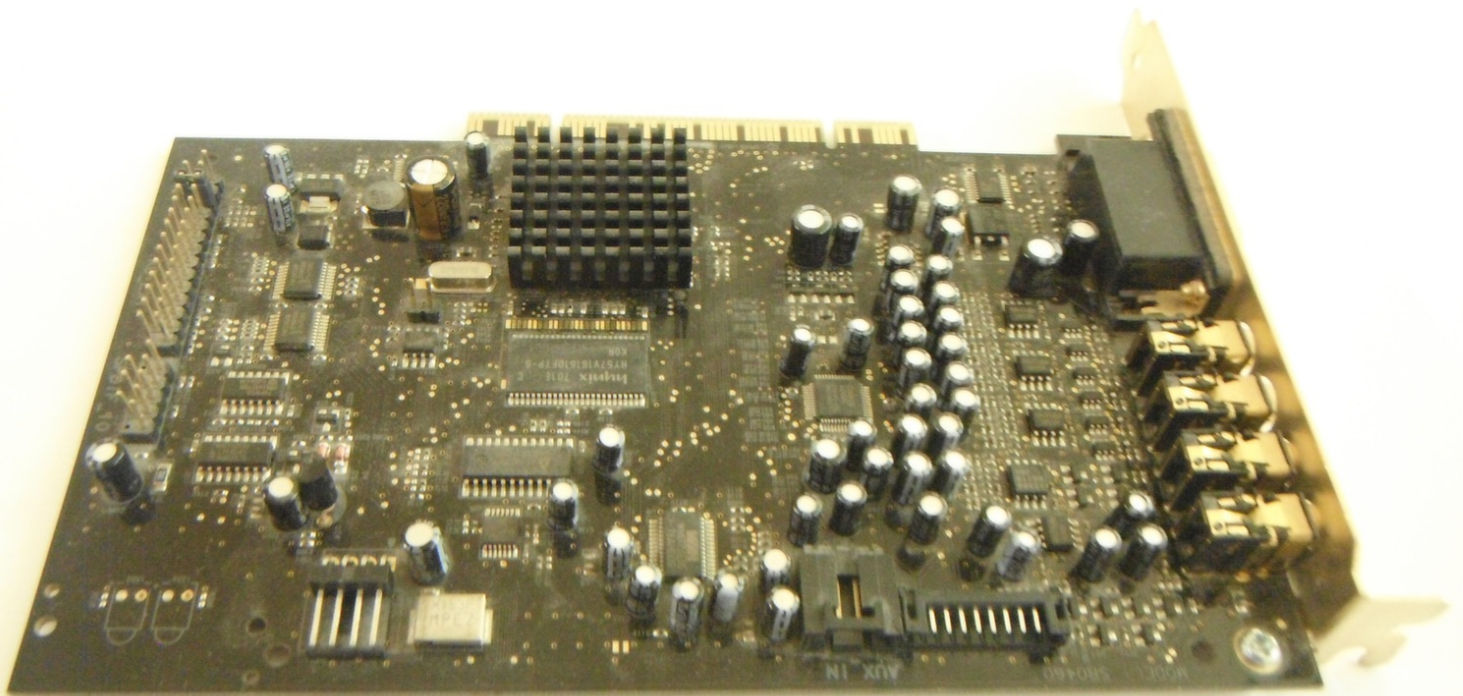

INTRODUCTION


The sound card is responsible for most of the audio functions on a computer. This guide will help users to remove and replace the sound card in the Dell XPS 720 H2C. The procedure is simple and will not take much time.

Step 1 — Cover Panel




- Remove the cover panel on the side of the computer by pulling out the latch on the back panel and pulling the panel downwards towards the ground.

Step 2 — Sound Card

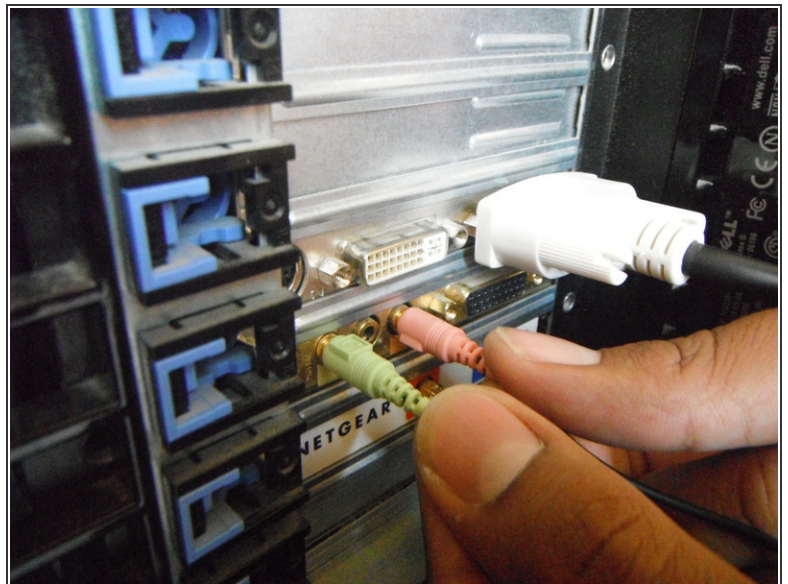


- The sound card is located at the bottom right of the computer area.
- Before moving into the "guts" of the computer, unplug any wires that are connected to the audio ports on the back panel.

Step 3

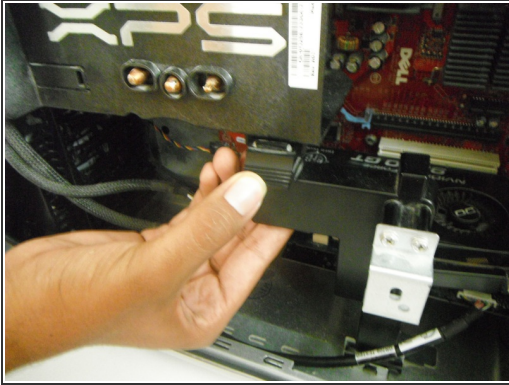


- Remove the support underneath the processor by pressing down on the latch at the top of the support and pulling the support towards you.

Step 4

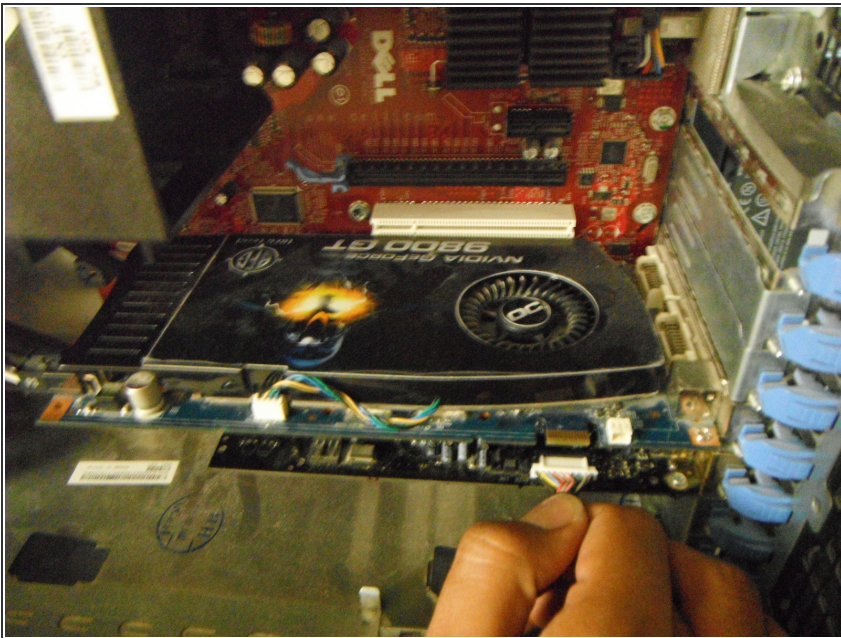



- Unplug the wire connecting the sound card to the motherboard by grasping the wire tightly and pulling it outwards.
- ⓘ If the wire seems to be stuck, do not be scared to pull with a little force, the wire will not break.

Step 5

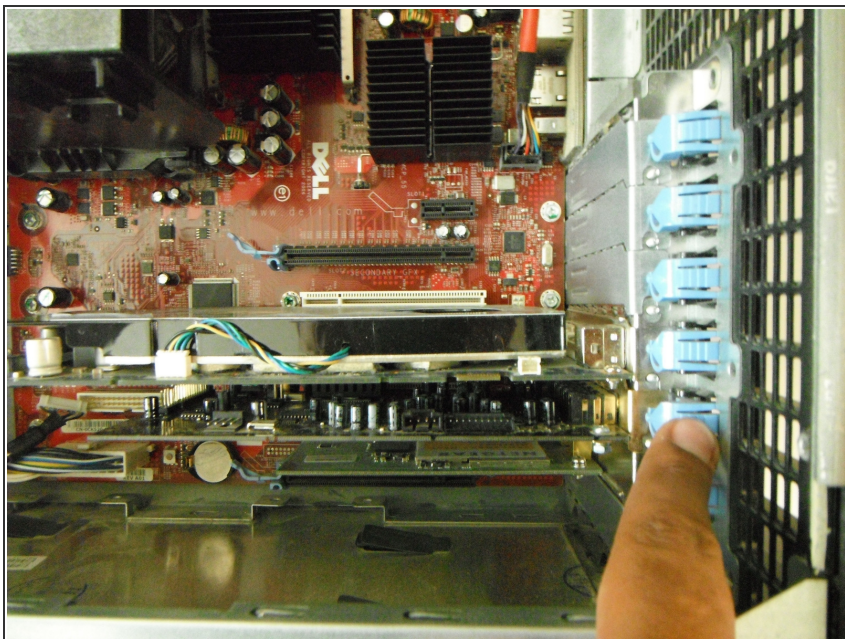

- Press down and to the right on the third blue tab from the bottom to release the sound card from the motherboard casing.

Step 6

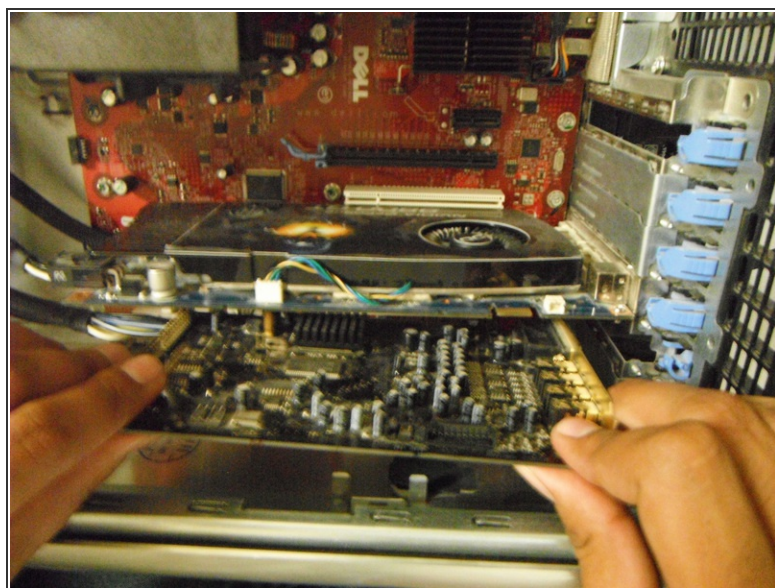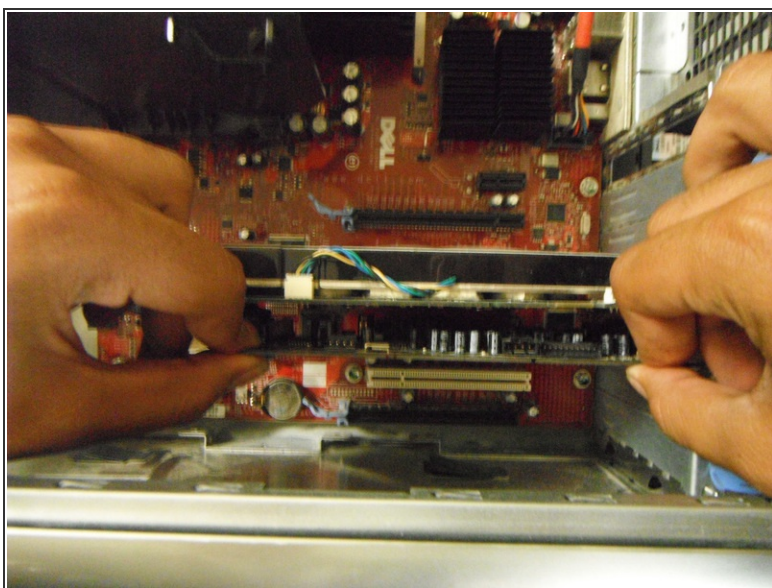

- Gently grasp the sound card and remove it from the motherboard. Pull directly outward and apply extra force if necessary.

To reassemble your device, follow these instructions in reverse order.

